



## **Installation Instructions**

LED rear lights with dynamic flashing light  
v1.0 (30.07.2019)

## Contents

1	Liability Exclusion	3
2	Copyright	4
3	General notes	4
4	Safety Instructions	5
5	Requirements for the intended use	5
6	How to connect a cable to another	6
7	Note Cable Inscription/Color	7
8	Assembly Instructions	8
9	Assembly Note	9
10	Disassembly dashboard cover driver's side	10
11	Disassembly A-column covering / sill trim driver's side	12
12	Disassembly tailgate covering	14
13	Disassembly trunk covering driver's side	16
14	Disassembly rear lights	18
15	Disassembly rear lights (tailgate)	19
16	Cable routing	20
17	Connection BCM	22
18	Connection rear lights	23
19	Coding with Coding Interface	24
20	Coding Interface	24
21	Assembling the vehicle	24
22	Bus rest	25
23	Additional vehicle function	25
24	Connection/Troubleshooting cable set	26

## 8 Assembly Instructions

The following illustration shows the cable routing as well as the position of the individual components.

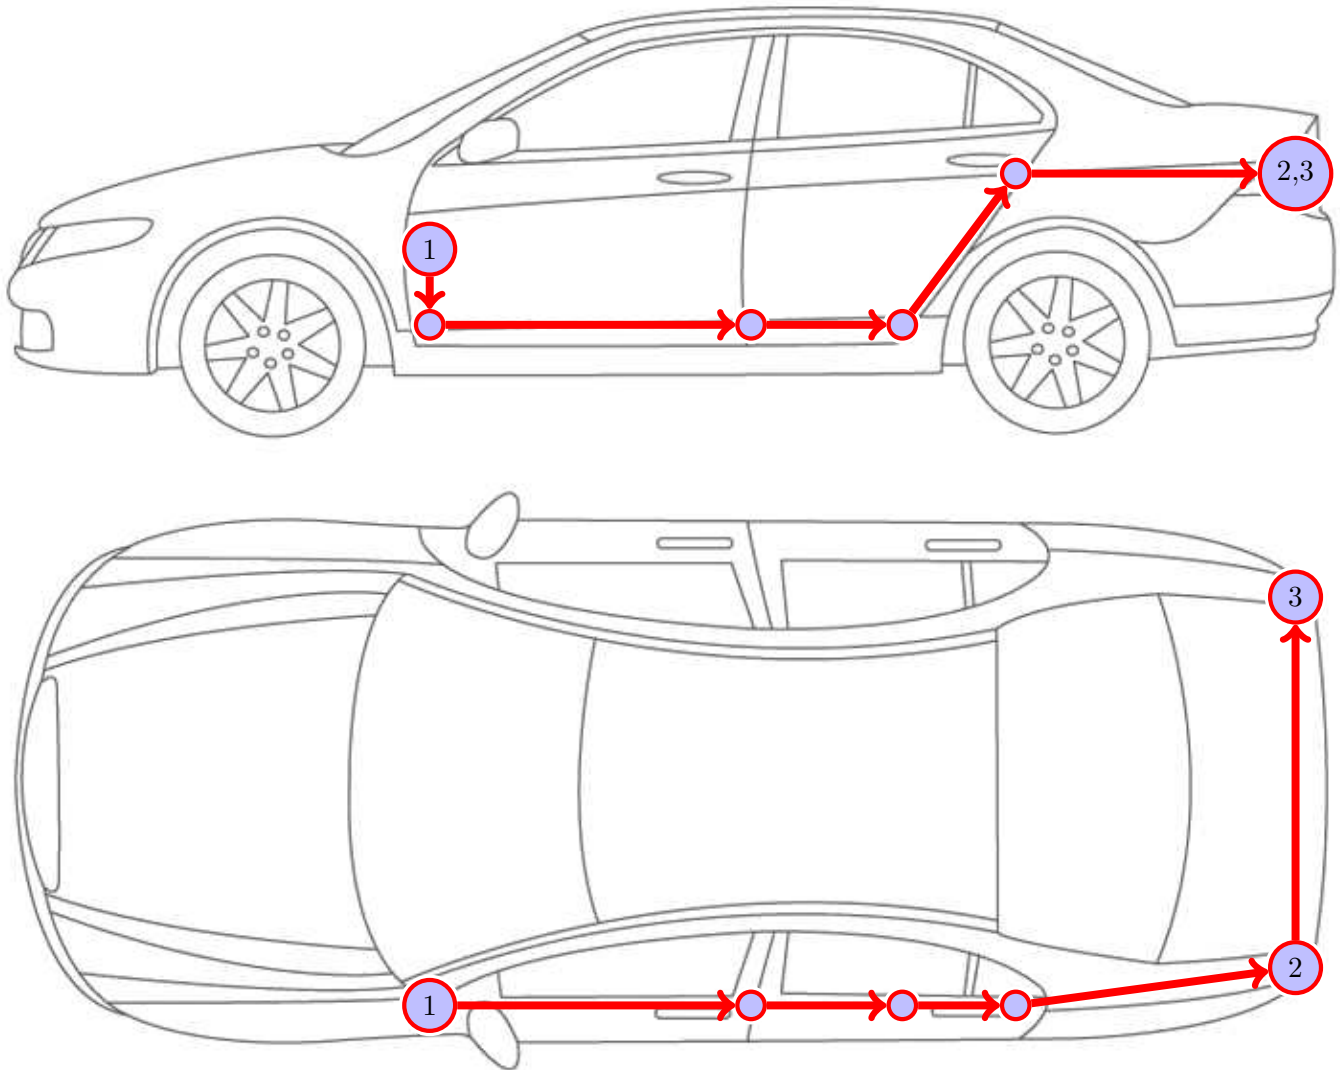


Figure 3: Vehicle Overview

- 1 Body Control Module (BCM)
- 2 Rear lights left inside and outside
- 3 Rear lights right inside and outside

Please be aware, that this overview is only for **illustration purposes**. Always lay the cable set in the **most convenient and shortest way** possible. For a detailed description of the cable routing, please refer to the relevant sections of the following manual.