



FMTUBL11 Fitting Instructions



Please thoroughly read through and familiarise yourself with these instructions in their entirety prior to beginning any part of the installation process of any component. Please also ensure the vehicle and engine has cooled down sufficiently to avoid risking possible skin burns or other injury.

TOOLS NEEDED:


10mm Spanner/ socket and ratchet

5mm Allen Key


1. Open the bonnet and locate the original turbo heat guard. Remove the 3x M6 Allen cap head fasteners with a 5mm Allen key and the 2x M6 nuts with a 10mm spanner/ socket and ratchet.



2. With the original heat guard left in place fit the Forge blanket over the top of it. Line up the holes at the top first and using the supplied 3x M6 fasteners and penny washers secure to top half of the blanket, do not fully tighten at this stage.

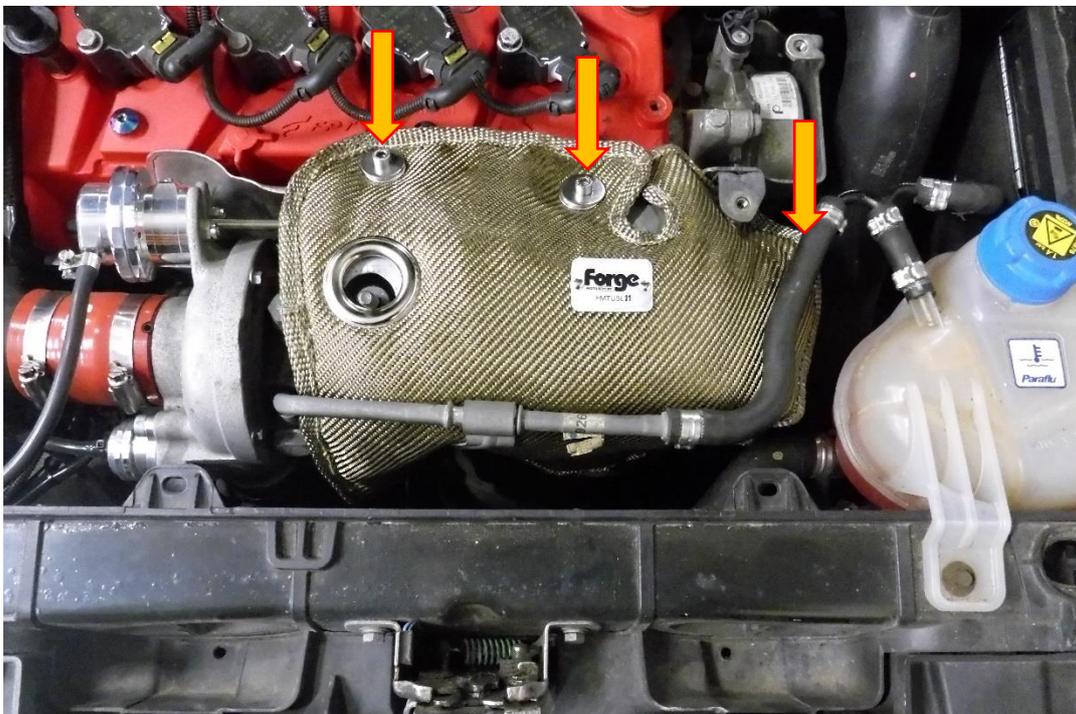

3. Stretch the blanket over the threaded studs and secure into place with the two supplied M6 nuts.

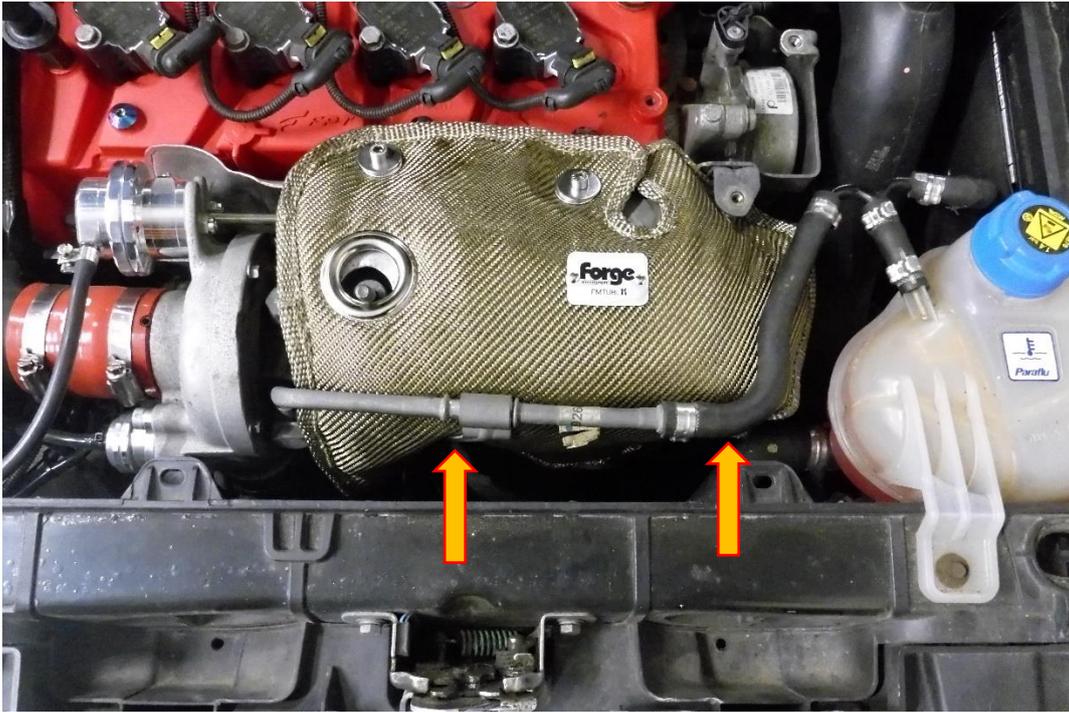

4. When you are happy with its positioning tighten up all fasteners. Fitment of FMTUBL11 is now complete.

Check out www.forgemotorsport.co.uk and www.forgemotorsport.com for a full range of performance products for your vehicle.

As always, with any questions or concerns about this product or anything else, please feel free to contact your local or preferred Forge Motorsport Dealer/Installer, or you may contact us directly.

Forge Motorsport UK – (+44)1452 380999/info@forgemotorsport.co.uk

Forge Motorsport US – (407)-447-5363/sales@forgemotorsport.com



www.facebook.com/forgemotorsport



@forgemotorsport



@forgemotorsport